



SERVICE DATA

POWER BLOWER

PB-265ESL

(Serial number : 37000001 and after)

STAGE II MODEL

INTRODUCTION

We are constantly working on technical improvement of our products. For this reason, technical data, equipment and design are subject to change without notice. All specifications and directions in this SERVICE DATA are based on the latest products information available at the time of publication.

CONTENTS

| | page |
|---|------|
| 1 SERVICE INFORMATION | 2 |
| 1-1 Specification | 2 |
| 1-2 Technical data..... | 3 |
| 1-3 Torque limits..... | 4 |
| 1-4 Special repairing materials | 4 |
| 1-5 Service limits..... | 5 |
| 1-6 Special tools | 6 |
| 2 CARBURETTOR ADJUSTMENT PROCEDURE .. | 7 |
| 2-1 General adjusting rules..... | 7 |
| 2-2 Presetting idle adjust screw, idle mixture needle and hi speed (H) mixture needle..... | 7 |
| 2-3 Adjusting carburettor..... | 8 |

Reference No. 21-25G-00

ISSUED: 200712



KIORITZ CORPORATION

1 SERVICE INFORMATION

1-1 Specifications

| | | | |
|--------------|--------------------------------|--|------------------------|
| Dimensions | Length* | mm(in) | 305 (12.0) |
| | Width* | mm(in) | 410 (16.1) |
| | Height | mm(in) | 435 (17.1) |
| Dry weight** | | kg(lb) | 6.1 (13.4) |
| Engine | Type | KIORITZ, air-cooled, two-stroke, single cylinder | |
| | Rotation | Anticlockwise as viewed from the output end | |
| | Displacement | cm ³ (in ³) | 25.4 (1.55) |
| | Bore | mm(in) | 34.0 (1.34) |
| | Stroke | mm(in) | 28.0 (1.10) |
| | Compression ratio | 7.0 | |
| Carburettor | Type | Rotary type : Diaphragm, horizontal-draught, with primer | |
| | Model | ZAMA RB-K85 | |
| Ignition | Type | CDI (Capacitor discharge ignition) system Variable Slope Timing (VST) : Slope advance ignition system combined with electronic speed governor | |
| | Spark plug | BPMR8Y | |
| Exhaust | Muffler type | Spark arrestor muffler with catalyst | |
| Starter | Type | ES (effortless-start) | |
| | Rope diameter x length | mm(in) | 3.0 x 815 (1/8 x 32.1) |
| Fuel | Type | †Premixed two-stroke fuel | |
| | Mixture ratio | 50 : 1 (2%) | |
| | Petrol | Minimum 89 octane | |
| | Two-stroke engine oil | ISO-L-EGD (ISO/CD13738), JASO FC/FD | |
| | Tank capacity | L (U.S.fl.oz.) | 0.66 (22.3) |
| Blower | Fan type | Centrifugal, single stage | |
| | End type | Curved pipe | |
| | Max. air volume (with pipes) | m ³ /min (ft ³ /min) | 9.3 (361) |
| | Max. air velocity (with pipes) | m/s (mph) | 59.0 (132) |
| | Discharge ID ^{††} | mm(in) | 62 (2.44) |

*Without blower pipes **With all blower pipes †Refer to Operator's manual. ††ID : Inner diameter

1-2 Technical data

| | | | |
|---|----------------------------------|-------|--|
| Engine | | | |
| Idling speed | r/min | | 2800 - 3200 |
| Wide open throttle speed | r/min | | 6700 - 7200 |
| Compression pressure | MPa (kgf/cm ²) (psi) | | 0.83 (8.4) (120) |
| Ignition system | | | |
| Spark plug gap | mm(in) | | 0.6 - 0.7 (0.024 - 0.028) |
| Minimum secondary voltage at 1500 r/min | kV | | 15 |
| Primary coil resistance | Ω | | 160 - 400 |
| Secondary coil resistance | kΩ | | 2.5 - 3.2 |
| Pole shoe air gaps | mm(in) | | 0.3 - 0.4 (0.012 - 0.016) |
| Ignition timing | at 1000 r/min | °BTDC | 7 |
| | at 3000 r/min | °BTDC | 18 |
| | at 7000 r/min | °BTDC | 31 |
| Carburettor | | | |
| Idle mixture needle initial setting | turns back | | 4 3/4 |
| H mixture needle initial setting | turns back | | 1 1/8 |
| Idle adjust screw initial setting | turns back* | | 5 |
| Test Pressure, minimum | MPa (kgf/cm ²) (psi) | | 0.05 (0.5) (7.0) |
| Metering lever height | mm(in) | | 0.1 - 0.25 (0.004 - 0.010) lower than diaphragm seat |

BTDC: Before top dead centre.

*Refer to page 7 on 2-2 initial idle adjust screw.

1-3 Torque limits

| Descriptions | Size | kgf•cm | 2N•m | in•lbf | | |
|-----------------------------|-------------------------------------|-----------------|-----------------|-----------|-----------|---------|
| Starter system | Starter pawl | M8* | 130 - 150 | 13 - 15 | 115 - 130 | |
| | Starter case | M5 [†] | 20 - 40 | 2 - 4 | 17 - 35 | |
| Ignition system | Ignition coil | M4 | 35 - 45 | 3.5 - 4.5 | 30 - 40 | |
| | Spark plug | M14 | 150 - 170 | 15 - 17 | 130 - 150 | |
| Fuel system | Carburettor insulator | M5 | 50 - 70 | 5 - 7 | 45 - 60 | |
| | Carburettor | M5 | 35 - 45 | 3.5 - 4.5 | 30 - 40 | |
| Engine | Crankcase | M5 | 70 - 110 | 7 - 11 | 60 - 95 | |
| | Cylinder | M5 | 70 - 110 | 7 - 11 | 60 - 95 | |
| | Cylinder cover | M5 | 60 - 80 | 6 - 8 | 50 - 70 | |
| | Cylinder cover with lead | M5 | 40 - 60 | 4 - 6 | 35 - 50 | |
| | Engine mount | M4* | 30 - 45 | 3 - 4.5 | 25 - 40 | |
| | Muffler | M5 | 70 - 80 | 7 - 8 | 60 - 70 | |
| | Muffler cover | M5* | 30 - 45 | 3 - 4.5 | 25 - 40 | |
| Others | Outer fancase | M5 [†] | 20 - 40 | 2 - 4 | 17 - 35 | |
| | Fan | M8 | 140 - 160 | 14 - 16 | 120 - 140 | |
| | Fan hub | M8 | 160 - 200 | 16 - 20 | 140 - 175 | |
| | Backpack flame compression spring | M5 [†] | 20 - 40 | 2 - 4 | 17 - 35 | |
| | Fan case assembly to backpack flame | Upper | M5 [†] | 25 - 50 | 2.5 - 5 | 20 - 45 |
| | | Lower | M5 [†] | 30 - 50 | 3 - 5 | 25 - 45 |
| | Throttle lever assembly | M5 | 35 - 50 | 3.5 - 5 | 30 - 45 | |
| | Trigger arm | M5 | 12 - 18 | 1.2 - 1.8 | 10 - 16 | |
| | Trigger fixture | M5 | 10 - 20 | 1 - 2 | 8 - 18 | |
| Regular bolt, nut and screw | M3 | 6 - 10 | 0.6 - 1 | 5 - 9 | | |
| | M4 | 15 - 25 | 1.5 - 2.5 | 13 - 22 | | |
| | M5 | 25 - 45 | 2.5 - 4.5 | 22 - 40 | | |
| | M6 | 45 - 75 | 4.5 - 7.5 | 40 - 65 | | |
| | M8 | 110 - 150 | 11 - 15 | 95 - 130 | | |

* Apply thread locking sealant (See below)


** The torque differences among four bolts should not exceed 20 kgf•cm (2N•m, 17in•lbf) on one cylinder or crankcase.

[†] Tapping screw or tapping bolt

1-4 Special repairing materials


| Material | Location | Remarks |
|------------------------|----------------------|---|
| Thread locking sealant | Engine mount | Loctite # 242, ThreeBond 1324 or equivalent |
| | Fun hub | |
| | Starter pawl | Loctite # 222, ThreeBond 1342 or equivalent |
| | Muffler cover | |
| Grease | Rewind spring | Lithium based grease or ECHO LUBE™ |
| | Starter centre shaft | |

1-5 Service limits

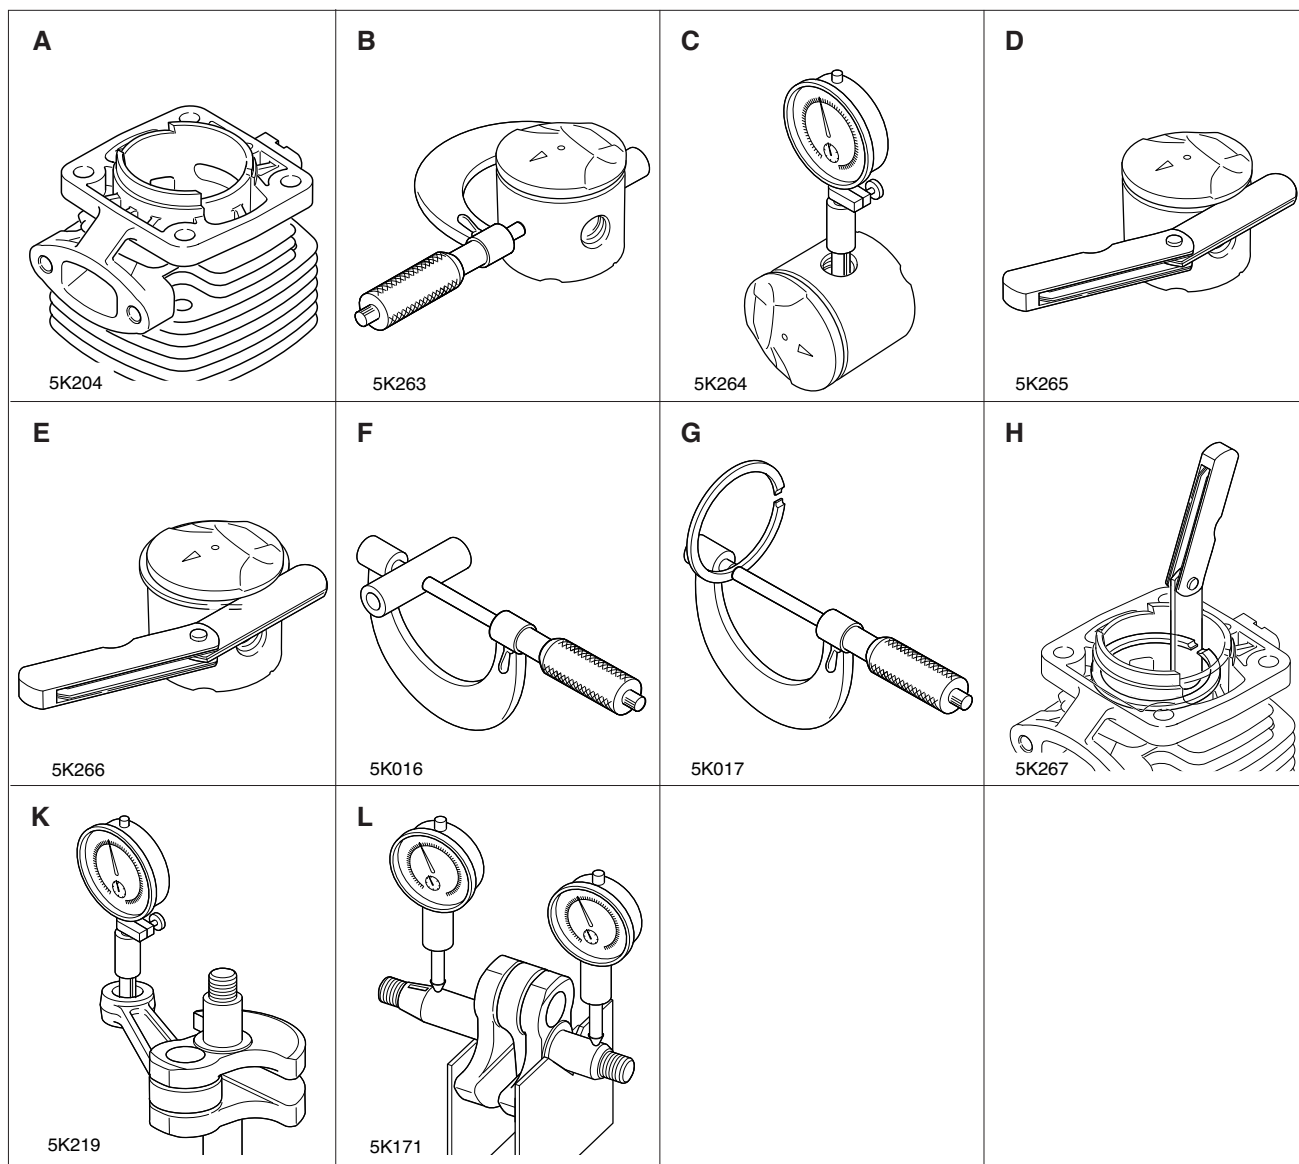

| Description | | mm (in) | |
|-------------|----------------------------|---|-----------------|
| A | Cylinder bore | When plating is worn and aluminum can be seen | |
| B | Piston outer diameter | Min. | 33.91 (1.335) |
| C | Piston pin bore | Max. | 8.030 (0.3161) |
| D | Piston ring groove | Max. | 1.3 (0.051) |
| E | Piston ring side clearance | Max. | 0.1 (0.004) |
| F | Piston pin outer diameter | Min. | 7.980 (0.3142) |
| G | Piston ring width | Min. | 1.15 (0.045) |
| H | Piston ring end gap | Max. | 0.5 (0.02) |
| K | Con-rod small end bore | Max. | 11.988 (0.4719) |
| L | Crankshaft runout | Max. | 0.05 (0.002) |

1-6 Special tools

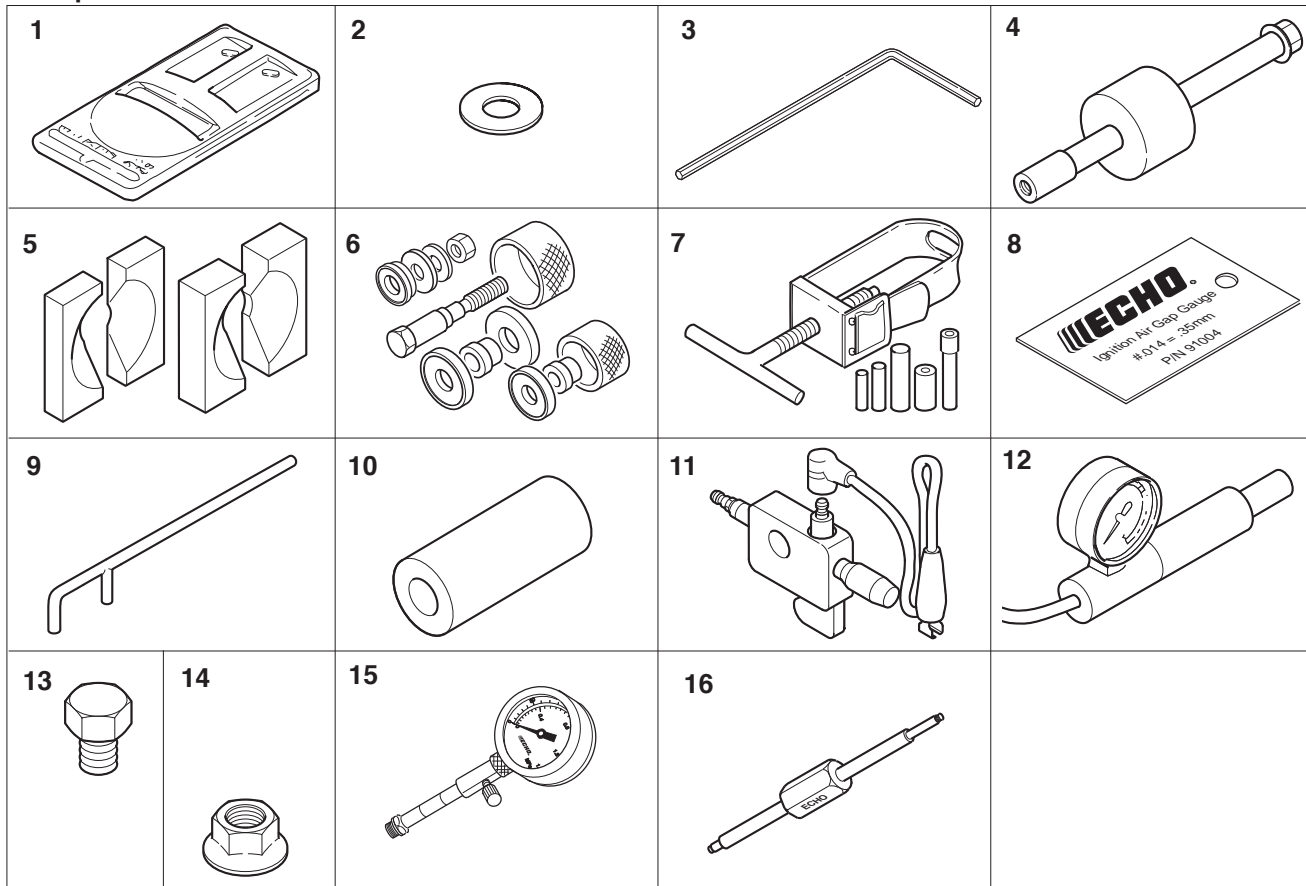

| Key | Part Number | Description | Used for: |
|-----|--------------|----------------------|---|
| 1 | 897801-33330 | Tachometer PET-1000 | Measuring engine speed |
| 2 | 363018-00310 | Washer | Installing crankcase oil seal of starter side |
| 3 | 895610-79920 | L-hex wrench (4 mm) | Removing and installing hex. socket bolts (M5) |
| 4 | 897603-23030 | PTO shaft puller | Removing driven (PTO) shaft |
| 5 | 897701-06030 | Bearing wedge | Removing ball bearings on crankshaft |
| 6 | 897701-14732 | Bearing tool | Removing and installing crankcase ball bearings |
| 7 | 897702-30131 | Piston pin tool | Removing and installing piston pin (Use 8 mm dia. adapter.) |
| 8 | 91004 | Module air gap gauge | Adjusting pole shoe air gaps |
| 9 | 897712-04630 | 2-pin wrench | Removing and installing pawl carrier |
| 10 | 897726-16431 | Oil seal tool | Installing crankcase oil seals |
| 11 | 990511-30023 | Spark tester | Checking ignition system |
| 12 | 897803-30133 | Pressure tester | Checking carburettor and crankcase leakages |
| 13 | 900100-08008 | Bolt | Removing magneto rotor (flywheel) |
| 14 | 433019-12330 | Flange nut | Removing magneto rotor (flywheel) |
| 15 | 91037 | Compression gauge | Measuring cylinder compression |
| 16 | 91020 | Limiter plug tool | Removing and installing plug |

2 CARBURETTOR ADJUSTMENT PROCEDUTER

2-1 General adjusting rules

A. Before starting the unit for adjustment, check the following items.

1. The correct spark plug must be clean and properly gapped.
2. The air filter element must be clean and properly installed.
3. The muffler exhaust port must be clear of carbon.
4. The fuel lines, tank vent and fuel filter are in good condition and clear of debris.
5. The fuel is fresh (> 89 octane : RON) and properly mixed at 50 : 1 with "ISO L-EGD" or "JASO FC/FD" 2 stroke oil.
6. All blower pipes are installed for proper engine loading.

B. Start and run engine for 3 minutes alternating engine speed between WOT for 50 seconds and idle for 10 seconds. Adjust idle speed screw to 3,000 +/- 200 r/min. If engine does not run correctly after this adjustment, proceed to the next step 2-2.

IMPORTANT : After adjusting carburettor according to the steps 2-2 and 2-3, the limiter plug(s) must be installed on Idle and hi speed mixture needle to comply with Emission Directive.

2-2 Presetting idle adjust screw, idle mixture needle and hi speed (H) mixture needle

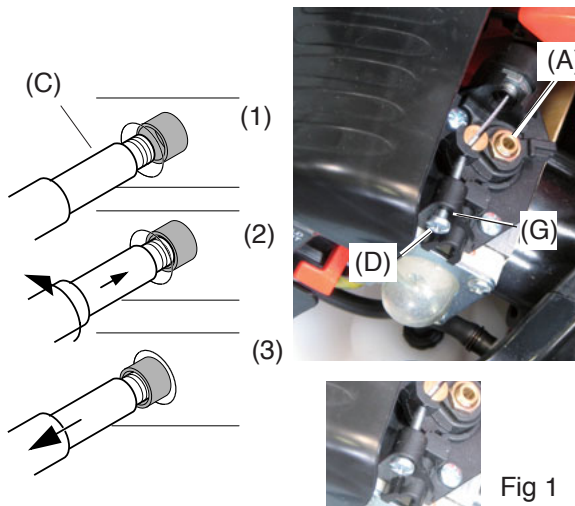
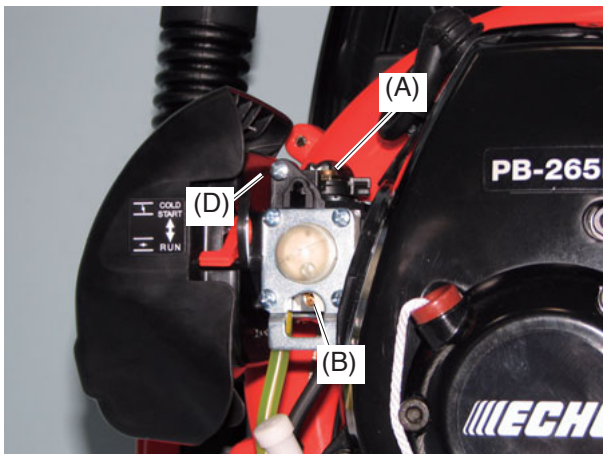


Fig 1

Tools Required : Small screwdriver with 2.5 mm blade, P/N 897801-33330 electronic tachometer, P/N 91020 limiter plug removal tool. Parts Required : (2) P/N A259-000010 limiter plugs.

1. Remove plugs from Idle mixture needle hole (A) and H mixture needle hole (B) using limiter plug tool (C) as follows.

(1)Put limiter plug tool (C) on limiter plug in mixture needle hole.

(2)Screw limiter plug tool anticlockwise 2 turns into limiter plug pushing the tool again the plug to engage the tool threads.

(3)Pull out limiter plug tool with the limiter plug from mixture needle hole.

(4)Repeat plug removal procedure for the other mixture needle.




NOTE : If the plug is damaged and left in the hole, use a needle or pin-shaped tool to remove deformed plug pieces.

2. Turn hi mixture needle (B) clockwise until lightly seated. And then turn hi speed mixture needle counterclockwise 1 1/8 turns. Turn idle mixture needle (A) clockwise until lightly seated. And then turn L mixture needle anticlockwise 4 3/4 turns.

3. Turn idle adjust screw (D) clockwise until its head touches boss (G) as shown Fig1. Then turn idle adjust screw (D) anticlockwise 5 turns.

NOTE : Initial carburettor setting (Idle adjust screw, idle and hi speed mixture needles) shown here is to start the engine after restoration or carburettor change. Idle adjust screw, idle and hi speed mixture needles turn for designated engine revolution through procedures indicated here may vary. As long as idle and WOT engine speed is set in given range, variance would be ignorable.

2-3 Adjusting carburettor

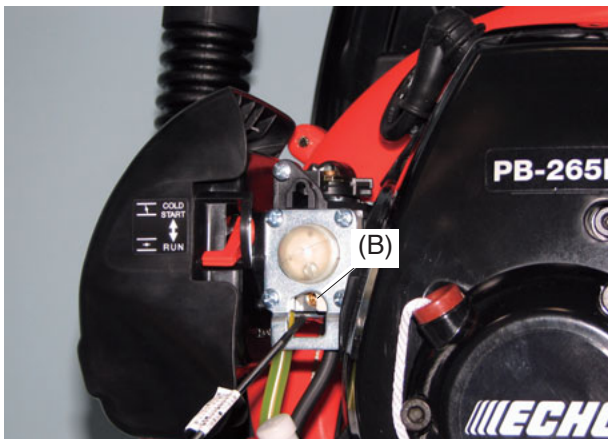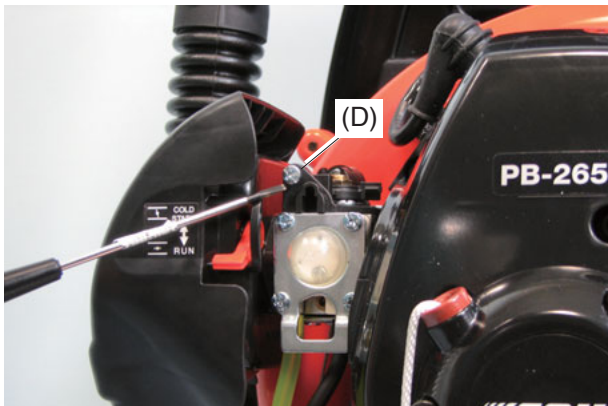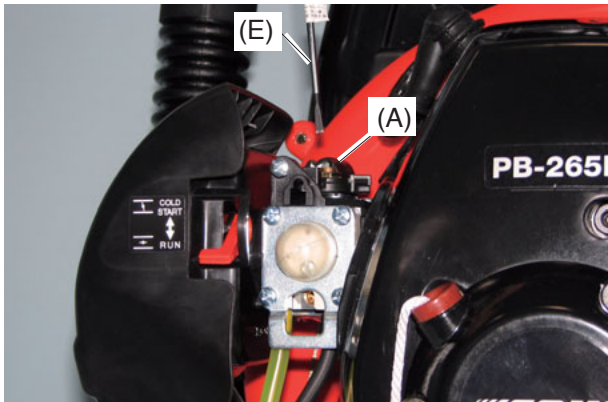

1. Start engine and warm it up alternating engine speed between WOT and idle every 10 seconds for 1 minute.

2. Adjust idle mixture needle (A) with 2.5 mm blade screwdriver (E) to reach maximum engine speed just before drop off.

3. Set idle speed to 3,500 r/min by turning idle adjust screw (D). Engine rpm should be stable at 3,500 +/- 10 r/min.

4. Turn idle mixture needle (A) anticlockwise to reduce idle speed 500 to 600 r/min in the range of 2,900 to 3,000 r/min.

NOTE : Engine speed must be allowed to stabilize a minimum of 20 seconds after each adjustment of idle mixture needle to assure accurate tachometer readings.

5. Adjust hi speed mixture needle (B) and obtain maximum WOT engine speed just before lean drop off using 2.5 mm blade screwdriver.

6. Turn hi speed mixture needle (B) anticlockwise to reduce WOT engine speed 10-20 r/min. Minimum WOT engine speed after adjusting should be over 6,700 r/min.

7. Start engine, and verify engine idle speed ranges from 2,800 to 3,200 r/min, and WOT engine speed ranges from 6,700 to 7,200 r/min. When final adjustment is completed, the engine should idle, accelerate smoothly, and attain WOT per above specification.

8. After adjusting carburettor, insert and secure new plug(s) (F) A259-000010 deep in the needle holes per the Emission Directive using limiter plug tool.

NOTE : Engine WOT, and idle speed in field operation may vary from final adjustment specifications due to changing ambient conditions, fuel, and engine loads. Safe engine speed variances should be within the WOT and Idle speed ranges listed in Section 1-1, otherwise the carburettor should be readjusted.